


decakila

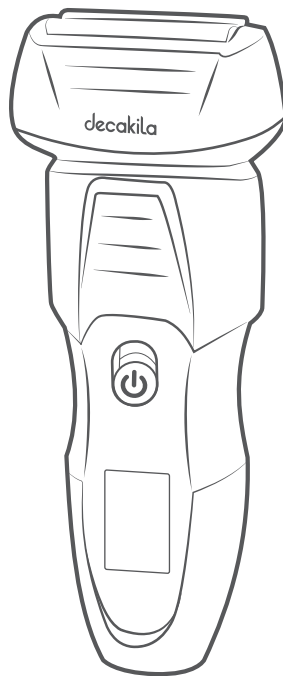


KMHR007W
FOIL SHAVER CE



CONTENTS

OVERVIEW OF THE COMPONENTS	01
INSTRUCTION MANUAL	02
GENERAL NOTES	02
SPECIAL SAFETY INSTRUCTIONS FOR THIS APPLIANCE	03
CLEANING	06

OVERVIEW OF THE COMPONENTS

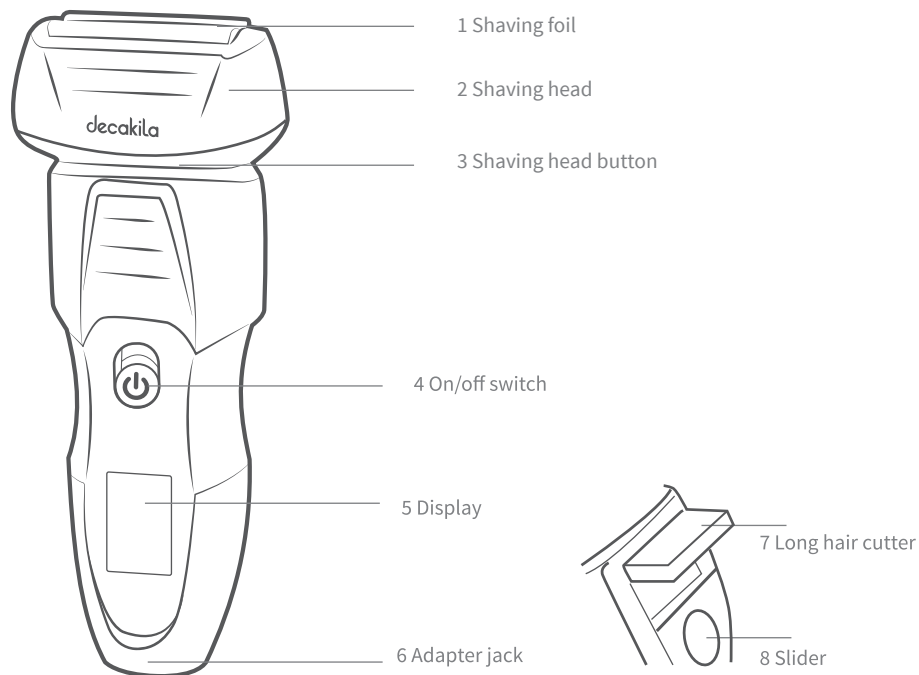

INSTRUCTION MANUAL

Thank you for choosing our product. We hope you will enjoy using the appliance.

Symbols in these Instruction Manual

Important information for your safety is specially marked. It is essential to comply with these instructions in order to avoid accidents and prevent damage to the appliance:

Warning:

This warns you of dangers to your health and indicates possible injury risks.

Caution:

This refers to possible hazards to the appliance or other objects.

Note: This highlights tips and information.

GENERAL NOTES

Read the operating instructions carefully before putting the appliance into operation and keep the instructions including the warranty, the receipt and, if possible, the box with the internal packing. If you give this appliance to other people, please also pass on the operating instructions.

- The appliance is designed exclusively for private use and for the envisaged purpose. This appliance is not fit for commercial use.
- The power adapter is only suitable for use in dry rooms.
- Check if the output current, voltage and the polarity of the power adapter match the information on the connected appliance!
- Do not touch the connected power adapter with wet hands!
- When cleaning if necessary disconnect the appliance from the power adapter.
- Ensure that the cable of the power adapter does not become kinked, jammed, driven over or come into contact with heat sources.
- Do not use a damaged power adapter.
- The appliance and the mains lead have to be checked regularly for signs of damage. If damage is found the appliance must not be used.

- Use only original spare parts.
- In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.

Warning:

Do not allow small children to play with the foil.
There is a danger of suffocation!

SPECIAL SAFETY INSTRUCTIONS FOR THIS APPLIANCE

WARNING OF ELECTRICAL SHOCK:

Do not use this appliance in close proximity to water if the power adapter is connected (e.g. bathtub, washbasin or other containers filled with water)!



Warning:

- Disconnect the hand-held unit from the connecting cable before cleaning it with water.
- Keep the appliance dry!
- Keep the power adapter dry.
- Do not charge the appliance in the vicinity of bathtubs, sinks, or other vessels containing water.
- If the appliance accidentally should fall into water, disconnect the power adapter from the wall socket immediately.
- Charge the appliance in a cool and dry location.

Warning:

- The appliance is intended for use with safety extra-low voltage. Connect only to a power supply according to the specifications on the rating label.
- Do not repair the appliance by yourself. Always contact an authorized technician. If the connection cable of this appliance has been damaged, it must be replaced with a special connection cable available from the manufacturer or its customer service.
- Do not replace any parts. Do not perform any modifications. Risk of electric shock!
- Always turn off the appliance and disconnect the plug after use.
- This appliance may be used by children, from the age of 8 and persons with reduced physical, sensory, or mental capabilities, or

persons with inadequate experience and lack of knowledge if they are supervised or have been trained and understand the hazards involved concerning the safe use of the appliance.

- Children must not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Do not use any power adapter other than the one supplied.

SCOPE OF DELIVERY

- 1 x Handset
- 1 x Power adapter
- 1 x Cleaning brush
- 1 x Pouch for storage
- 1 x Protection cover for shaving foil

OVERVIEW OF THE COMPONENTS

- 1.Shaving foil
- 2.Shaving head
- 3.Shaving head button
- 4.On/off switch
- 5.Display
- 6.Adapter jack
- 7.Long hair cutter
- 8.Slider

CHARGING THE APPLIANCE

- 1.Turn off the appliance. <(oH is visible on the switch.
- 2.Connect the adapter plug to the adapter jack on the bottom of the appliance.
- 3.Plug the power adaptor into a wall outlet.

Note:

- During the charging process, the plug-symbol shall light up on the display.
 - The minute indicator in the display provides information on the charging status of the battery. *'60" indicates that the battery is fully charged.
- 4.Charge the appliance before first use for 2,5 hours.

Note:

After initial use, do not charge the battery for longer than 2,5 hours at one time.

Note:Mains Operation

Is the battery completely empty and do you want to operate the appliance with the cord?
Charge the battery for a few seconds. After that, you may operate the appliance with the cord.

Caution:

After 2,5 hours always disconnect from mains power supply.

Note:Lifetime of Rechargeable Battery

You can extend the lifetime of the rechargeable battery by following these steps:

- Only charge after the battery is nearly exhausted.
- Do not charge for more than 2,5 hours.
- Charge the appliance at temperatures between 0 °C and + 40 °C.

SHAVING

- 1.Remove the protective cover.
- 2.Push the switch upwards. K0w is visible.
- 3.Hold the shaver at a right angle to your face.
- 4.Follow the outline of your face, and continue to hold the shaver at a right angle to your skin. Small irregularities will be corrected by the flexible shaving head.

Note:

- Shave against the direction of hair growth.
- If necessary, stretch the skin with your free hand.

Using the Long Hair Cutter

With the long hair cutter, you can trim head hair or beard hair in a controlled manner.

- Use the slider to turn the long hair cutter off or on.

Stop Operation

Stop operation by pushing the switch downwards, “o” is visible.

CLEANING

Warning:

- Before cleaning the handset with water, disconnect it from the connection cable.
- Disconnect the power adapter from the wall socket when cleaning.
- Do not immerse the appliance and the power adapter into water.

Caution:

- Do not use a wire brush or other abrasives.
- Do not use sharp or abrasive cleaning agents.

SHAVING HEAD

Caution:

The shaving foil must not be cleaned with the brush. Use the brush to clean the cutter block and the inside of the shaving head. You may clean the shaving head under running water.

1. Switch off the appliance.
2. Press the shaving head buttons.
3. Rinse the shaving head and the cutter block under hot running water. Clean the shaving head in soapy water once in a while.

Caution: cutter block

Remove the cutter block as a whole only. Otherwise, the smaller parts may become lost. To remove the cutter block, withdraw it from the appliance using the white connecting piece.



4. Rinse thoroughly with clear water afterwards.
5. Let the cleaned parts dry.

CLEANING THE HAND-HELD UNIT AND POWER ADAPTER

- You may wipe these parts with a damp cloth.
- Use slightly soapy water to remove spots.

MAINTENANCE AND REPLACEMENT

- Clean the cutter block thoroughly once a month. If necessary, use special cleaning aids available in specialist shops.
- Lubricate the shaving foils and the long hair cutter using light machine oil (a few drops are enough).

REPLACEMENT OF SHAVING PARTS

For 100% optimum shaving performance, change the shaving head and the cutter block at least every 18 months or whenever the shearing parts show signs of wear. It is recommended to replace both parts at the same time. For replacement parts, please consult your dealer.

TECHNICAL DATA

Model:KMHR007W

Degree of protection against liquids:IPX5

Power Adapter

Power supply:AC100-240V.50/60Hz, 0.20A

Output:DC 5V, 1A

Rechargeable battery:2x1.2V,600mAh NiMH

Run time:max.50 minutes

Charging time:8hours

*This appliance complies with IPX5. This means the appliance is protected against regular jet water.

The right to make technical and design modifications in the course of continuous product development remains reserved.

This appliance has been tested according to all relevant current CE guidelines, such as electromagnetic compatibility and low voltage directives, and has been constructed in accordance with the latest regulations.

DISPOSAL

REMOVE/DISPOSE OF RECHARGEABLE BATTERIES

The appliance contains a rechargeable battery. Used batteries/accumulators (rechargeable batteries) do not belong in domestic waste.



The battery must be removed before the product will be recycled.

Contact qualified personnel.

Information, where batteries/accumulators are to be disposed of can be obtained from your local or municipal authorities.

MEANING OF THE “DUSTBIN” SYMBOL

Protect our environment: do not dispose of electrical equipment in the domestic waste.

Please return any electrical equipment that you will no longer use to the collection points



This helps avoid the potential effects of incorrect disposal on the environment and human health.

This will contribute to the recycling and other forms of reutilization of electrical and electronic equipment.

Information concerning where the equipment can be disposed of can be obtained from your local authority.



decakila



decakila



decakila

Made in China Jiangsu China. 2021.D02

www.decakila.com Global Links Technology Co. Pte. Ltd.