



FICHA TÉCNICA

Kit puerta de baño YLM 150 cm

Carbone QuickGlass


DESCRIPCIÓN

Kit de puertas de baño corrediza YLM de 150 cm. Incluye vidrios templados de 6 mm, perfiles de aluminio brillantes, tiradores toalleros, ferretería y tornillos, embalaje de cartón resistente, instrucciones de instalación incluidas.

CÓDIGO

YLM-JNS-2P (150X180M)

Detalle embalaje

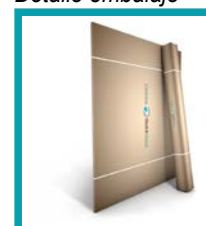

Marca: Carbone QuickGlass

Perfiles: Incluidos, acabado brillante

Tiradores: Incluidos, acabado brillante

Instrucciones instalación: Incluidas

Procedencia: Importado

Ancho Ducha: 150 cm


Alto Ducha: 180 cm

Vidrio: Incluye vidrio templado de 6 mm.

Rango instalación: 1350 a 1500 mm

Acabado: Brillante

YLM-JNS-2P

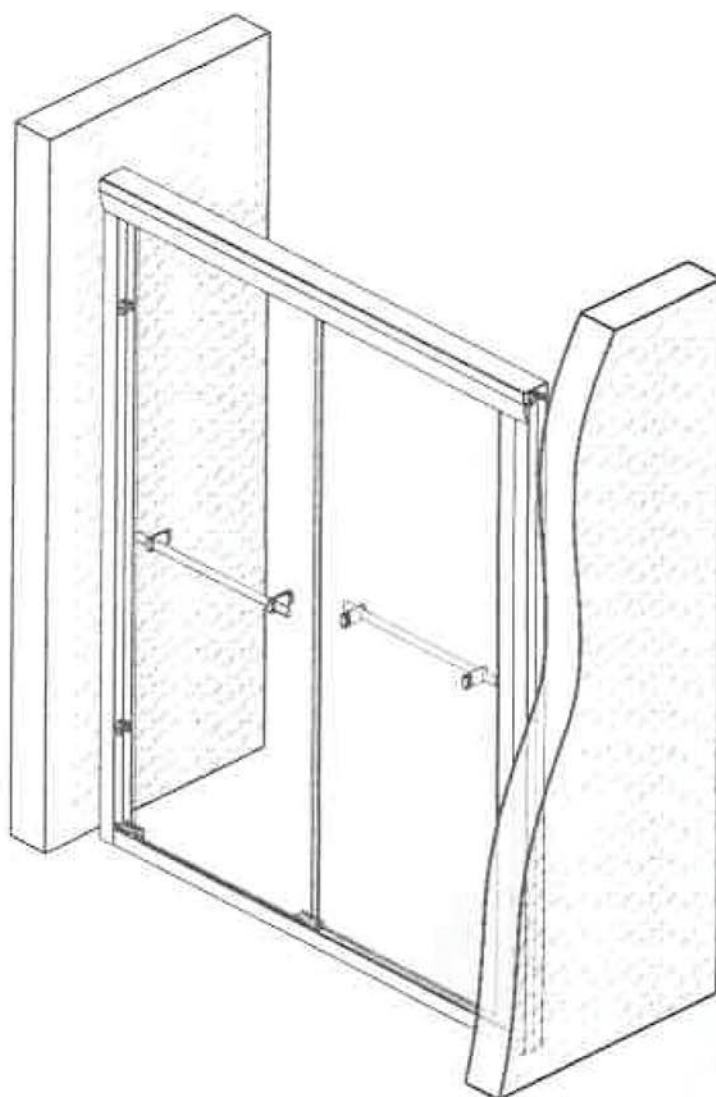

General Information

Please inspect the product immediately upon receipt for transit damage, missing packs/parts or manufacturing fault. Damage reported later cannot be accepted. Please handle the product with care avoiding knocks and shock loading to all sides and edges of the glass.

Notes: Safety glass can not be re-worked.

Please read these instructions carefully before start of installation.

Special care should be taken when drilling walls to avoid hidden pipes or electrical cables.

Note: This products is heavy and may require two people to install


Aftercare instructions

After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluble lime salts may be deposited and allowed to build up. Cleaners of a gritty or abrasive nature should not be used. Care should be taken to avoid contact with strong chemicals such as organic solvents and strippers.

Glass cleaners can be used but with caution, if in doubt contact the manufacturer of the cleaner in question.


Please keep these instructions for aftercare and customer service details.



Tools Required

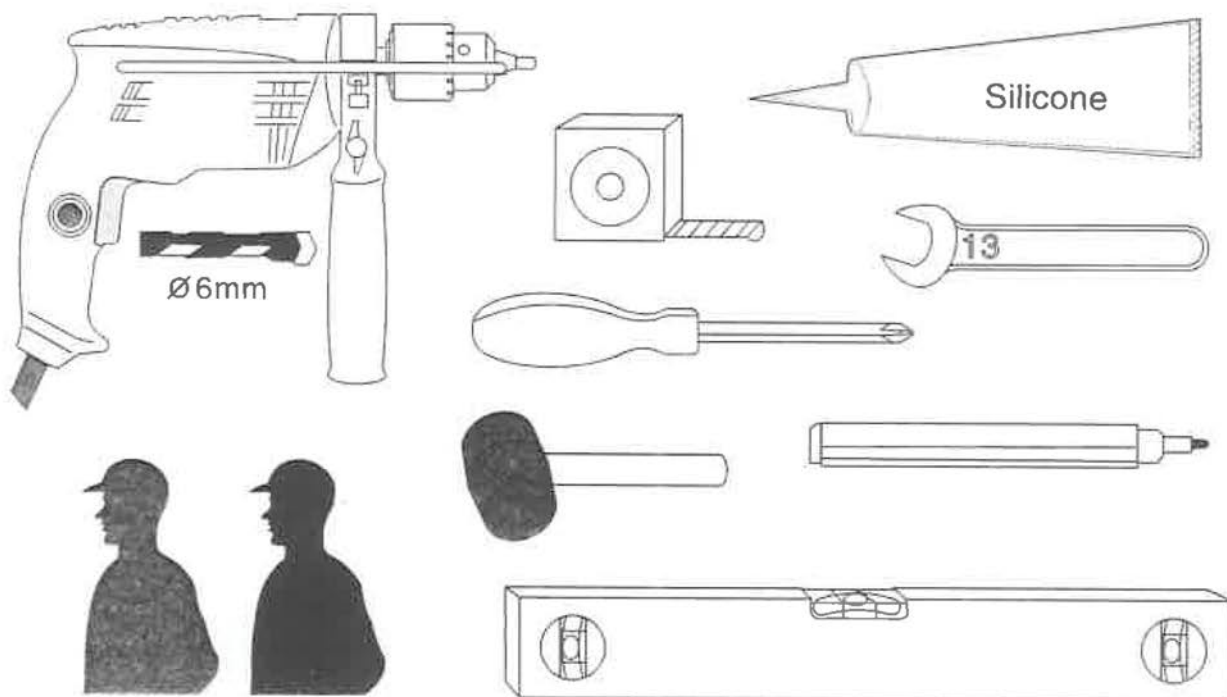


This product is heavy and may require two people to install.



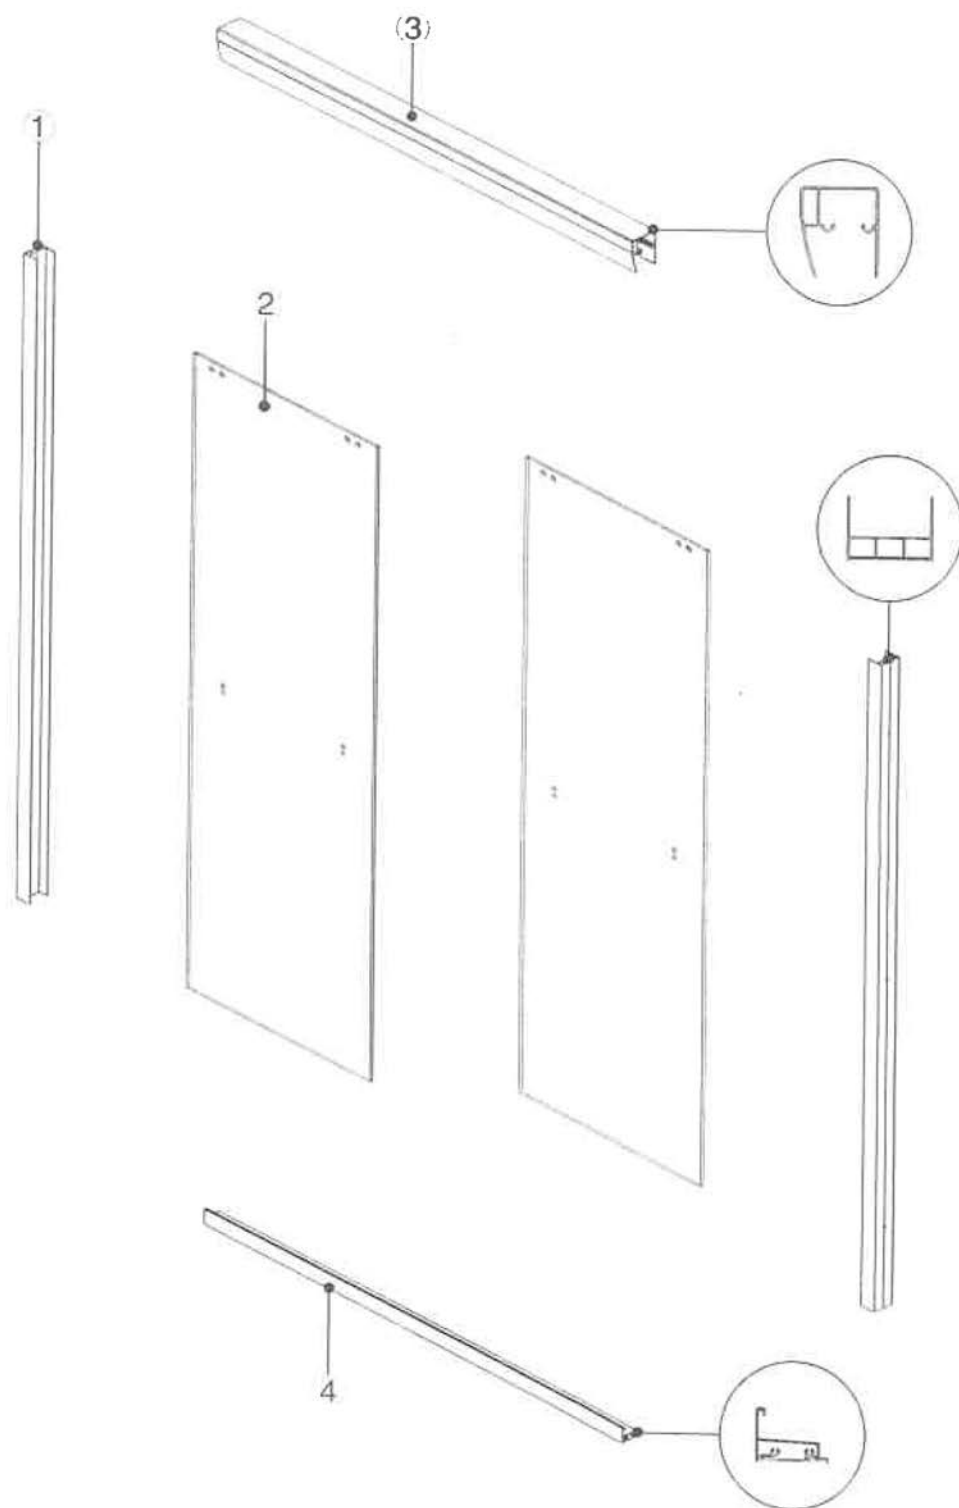


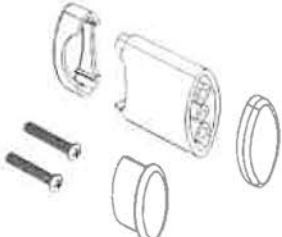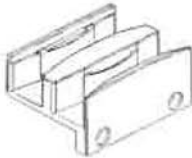5		x2	11	 Ø6mm	x6
6		x4	12	 Ø4*30mm	x6
7		x4	13	 Ø4*25mm	x4
8		x3	14	 Ø4*12mm	x4
9		x4	15	 Ø4*12mm	x6
10		x6	16		


1.

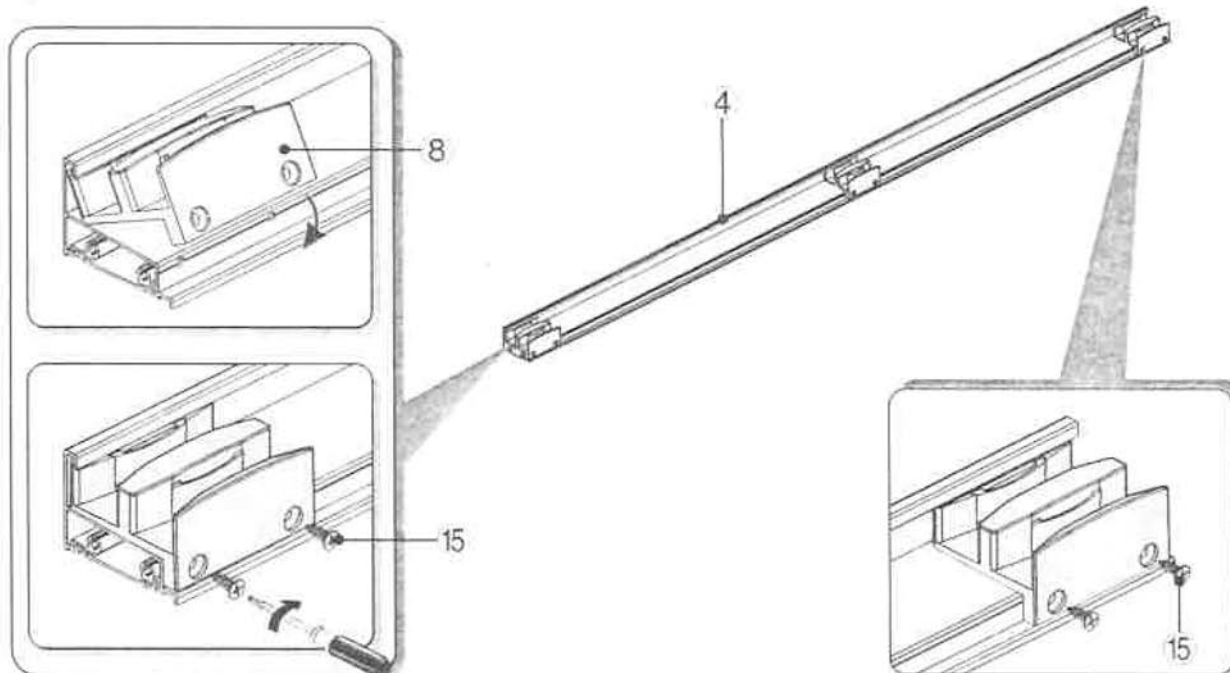


2.

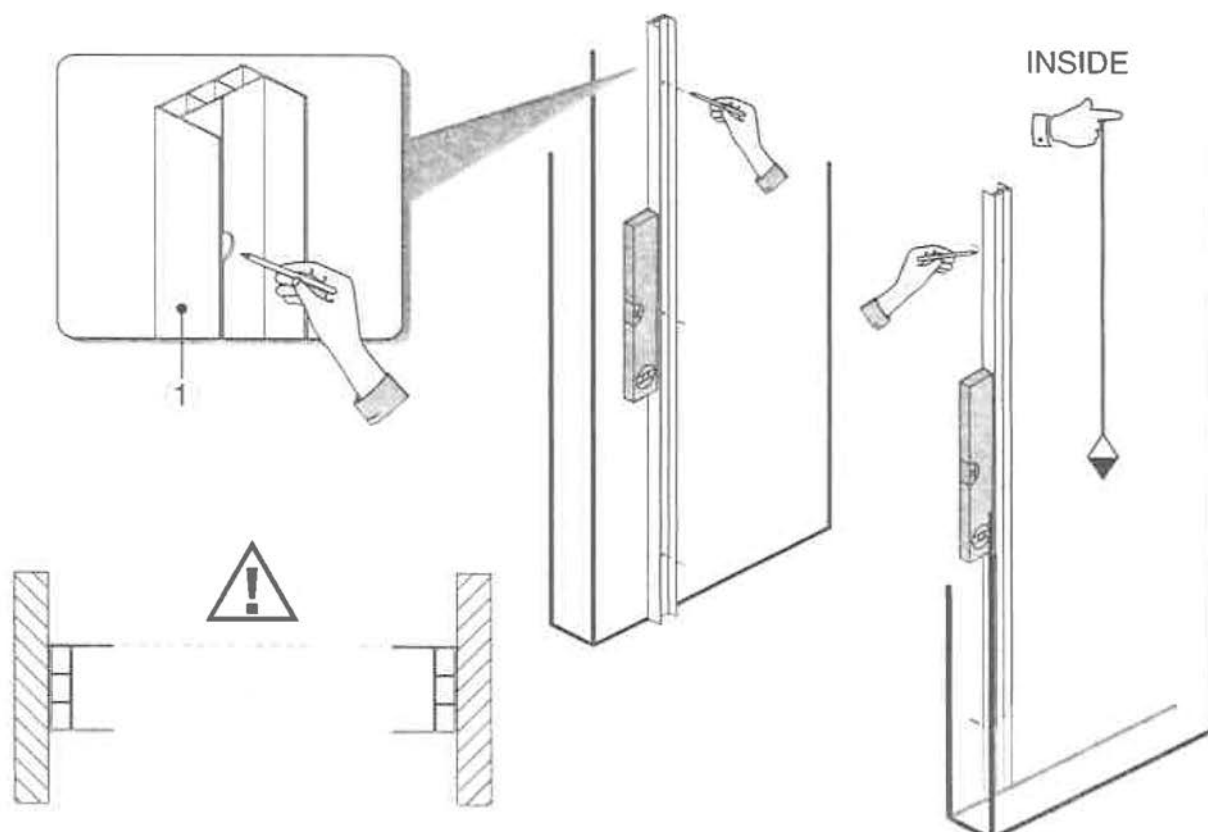


3.

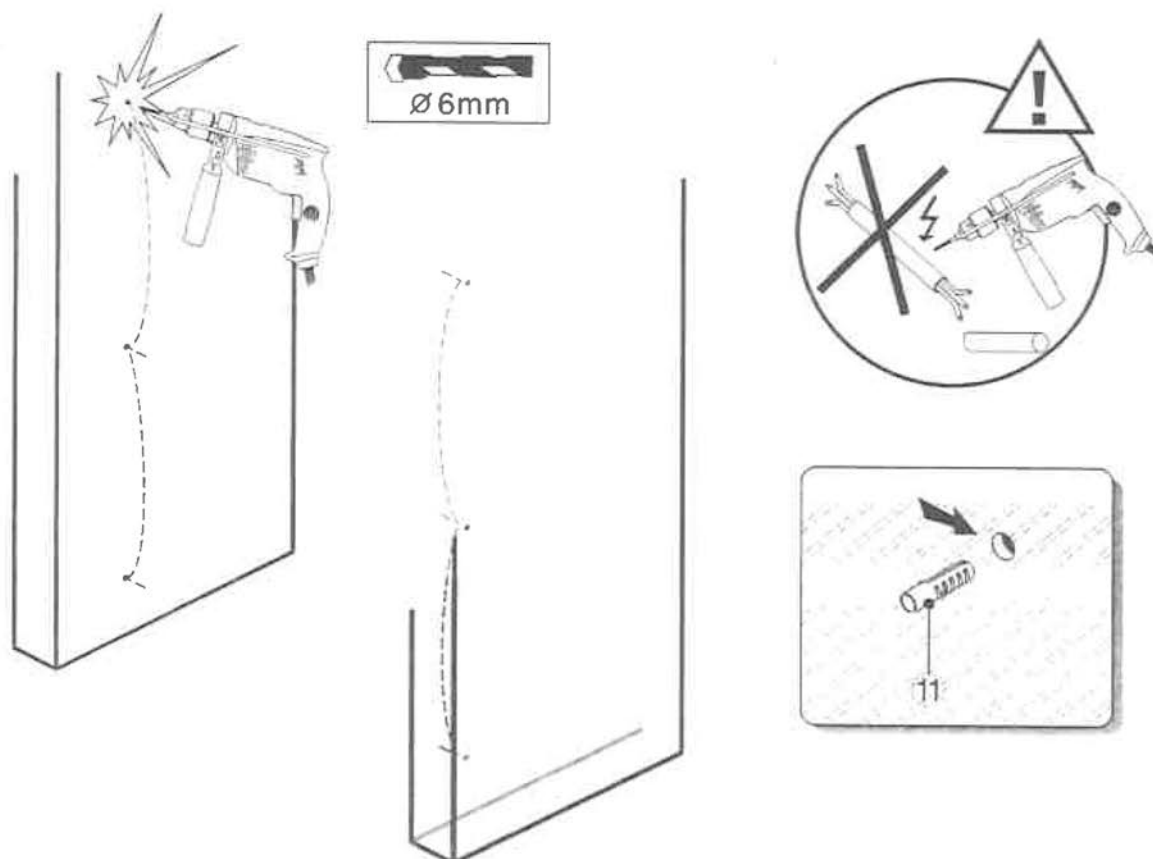


4.

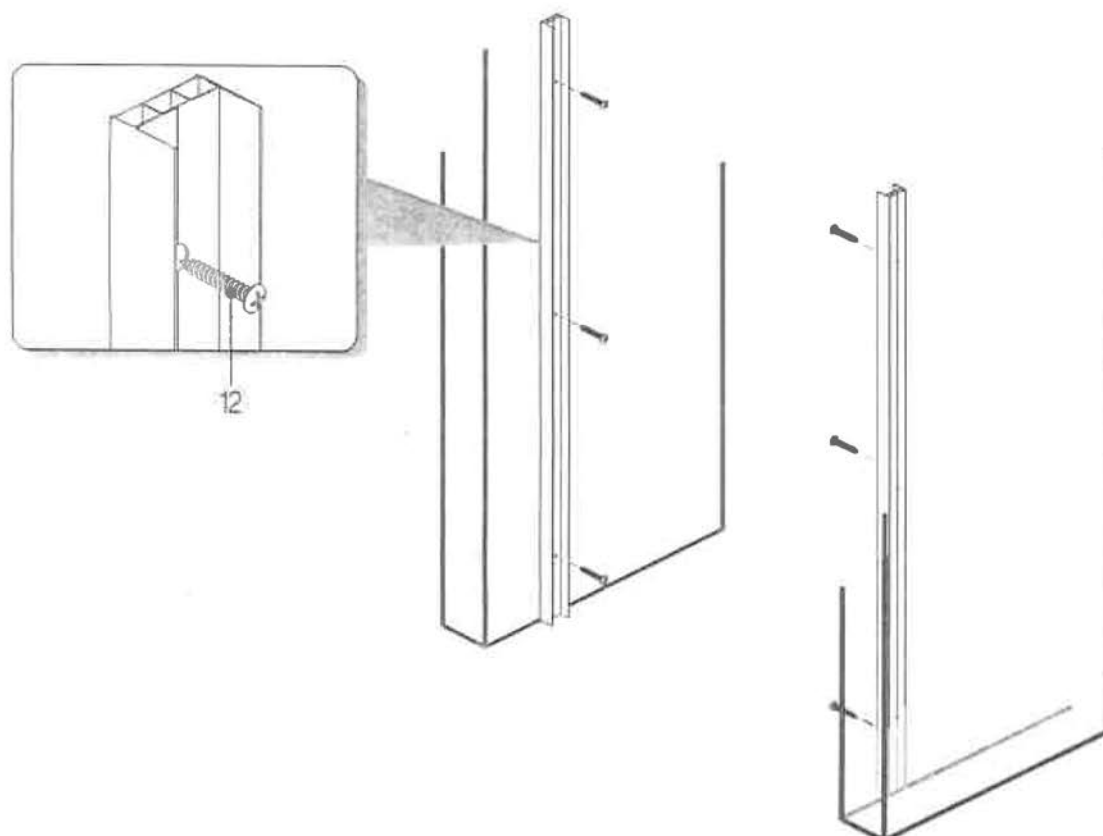


5.

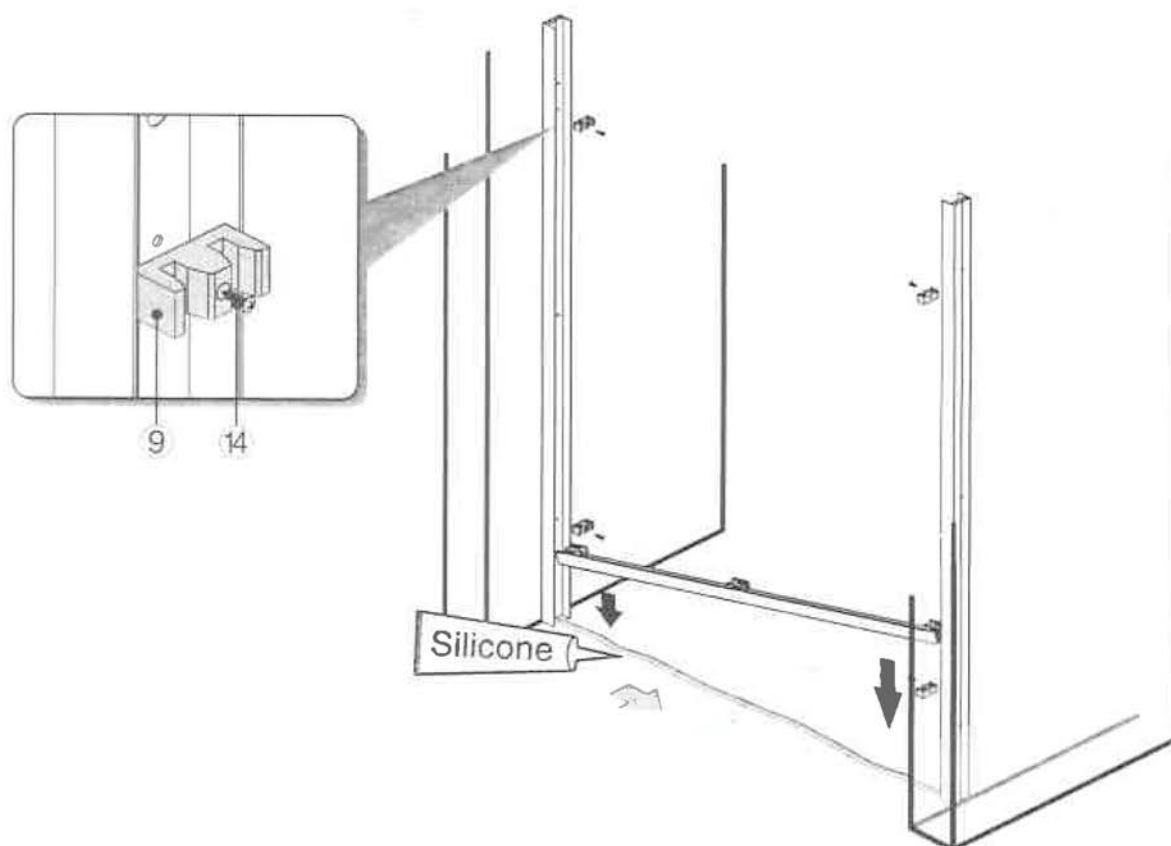


6.

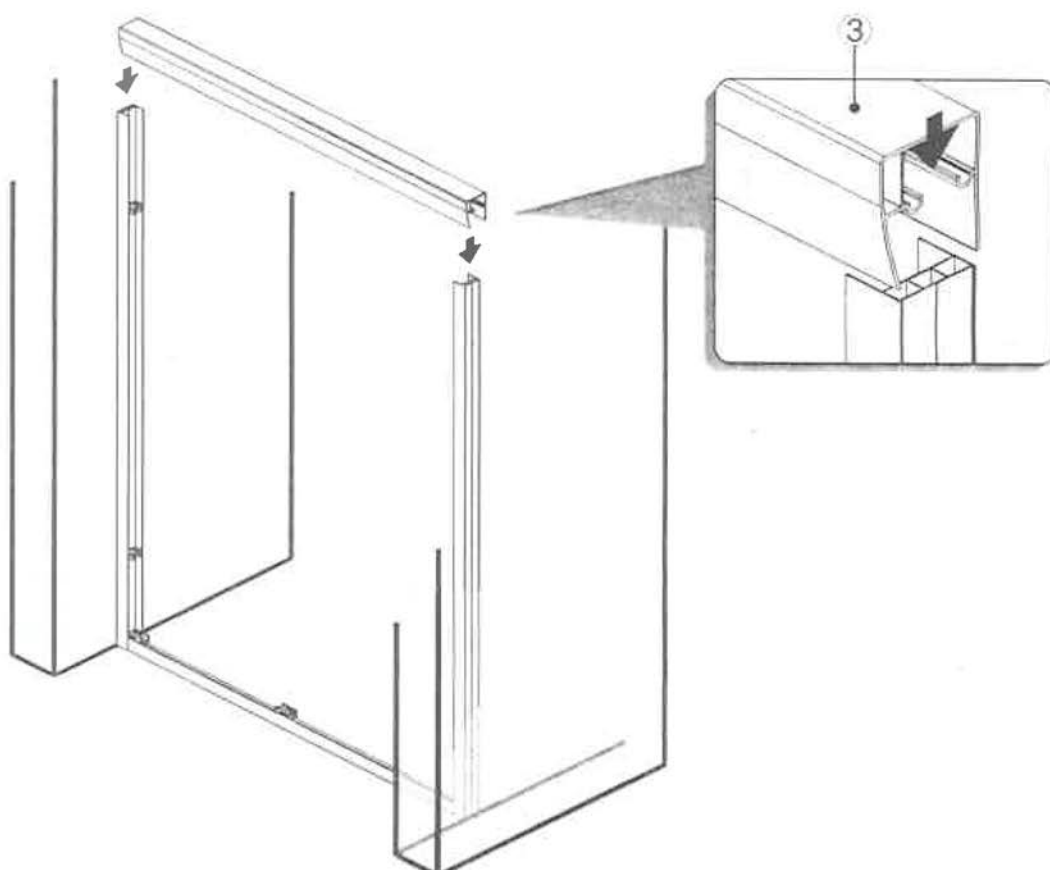


7.

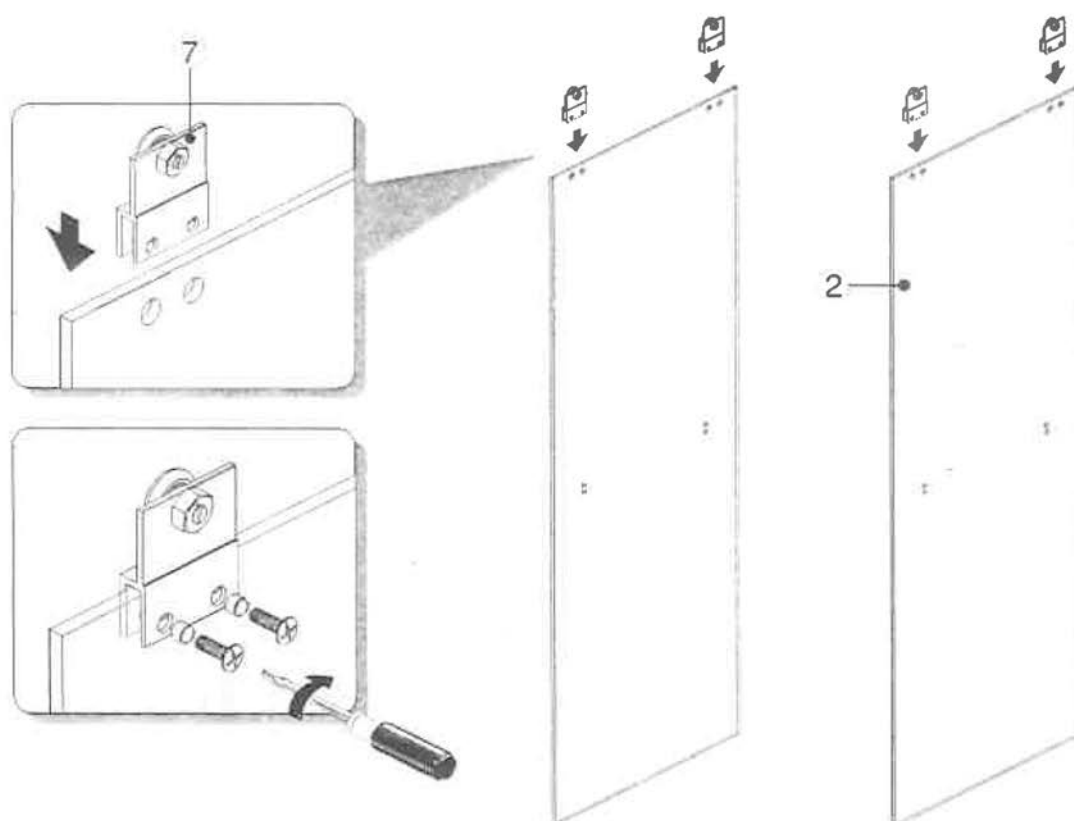


8.

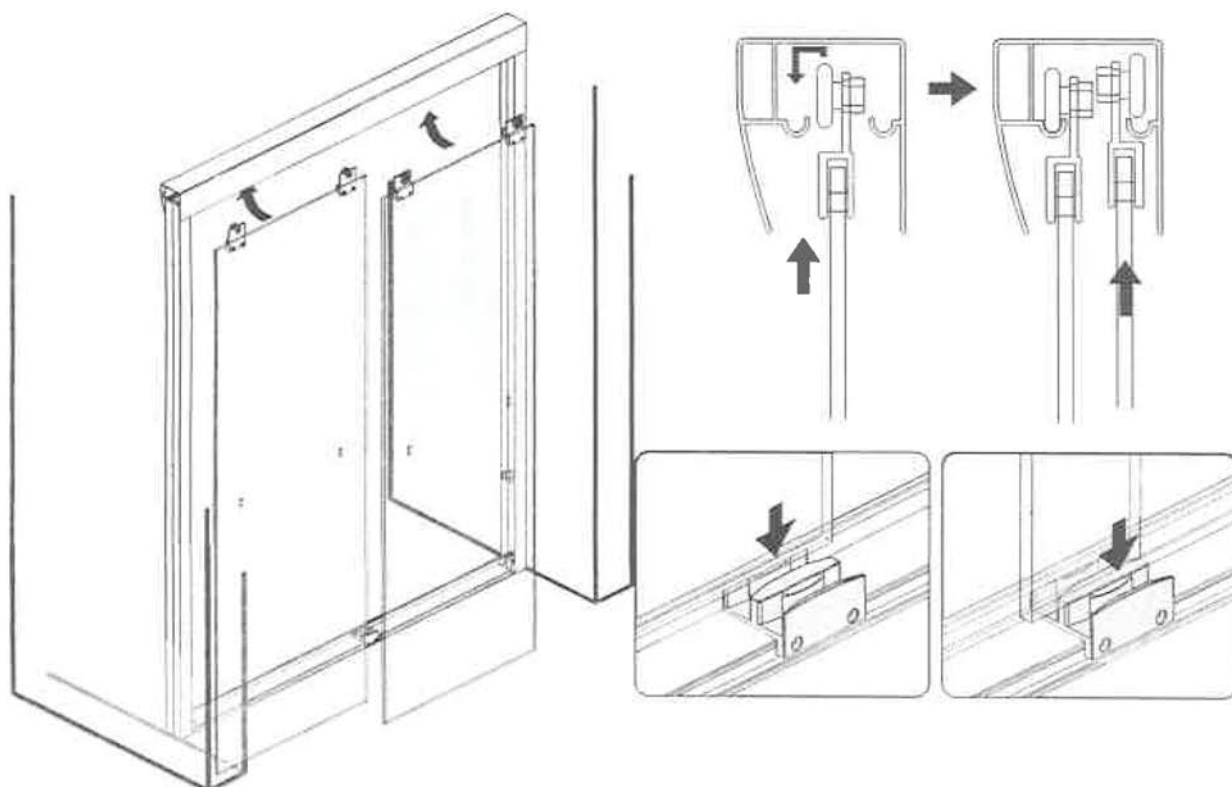


9.

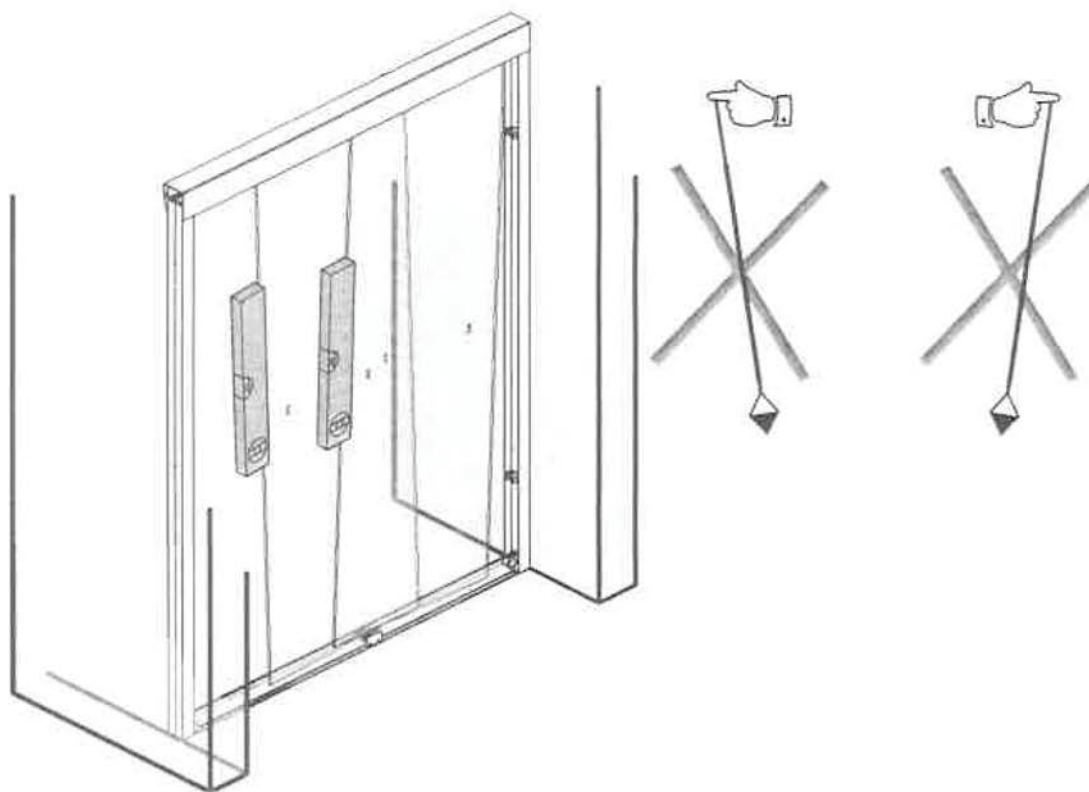


10.

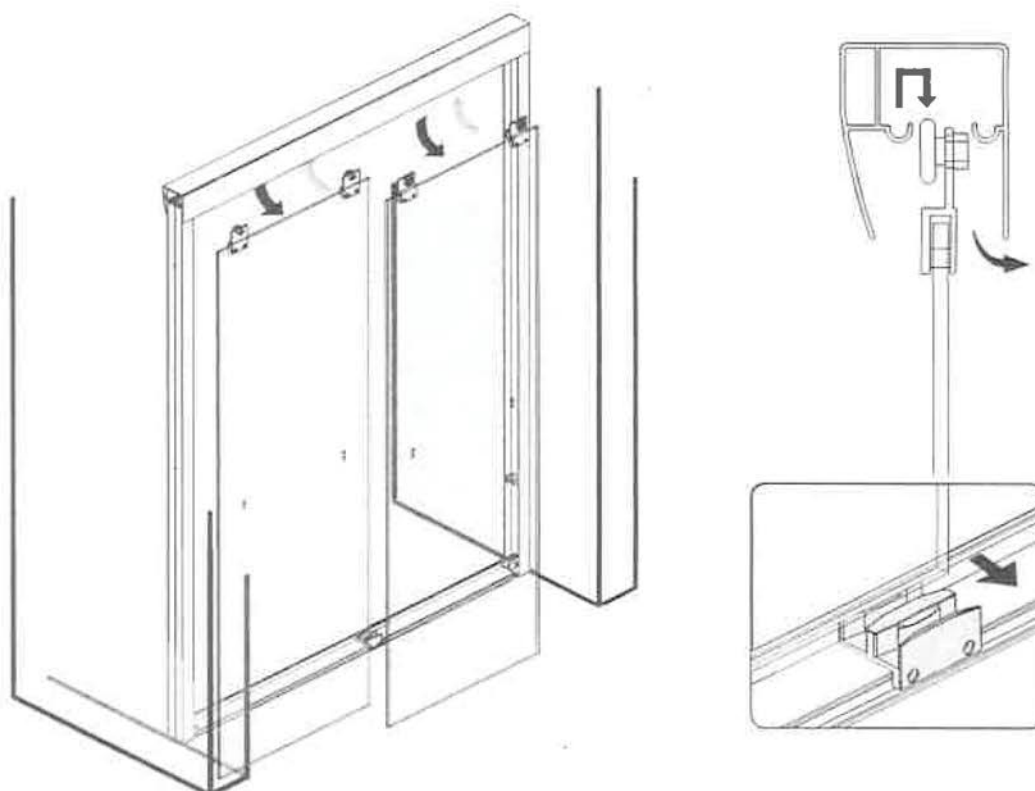


11.Adjust

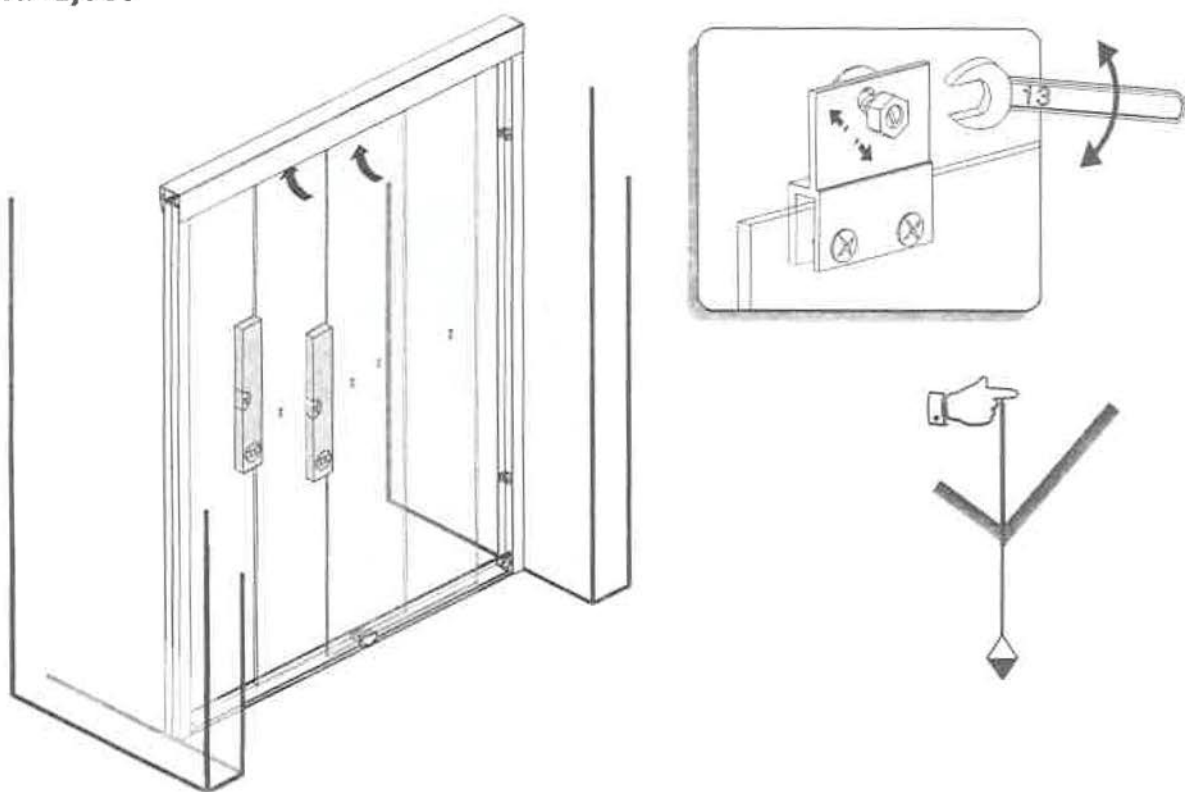


2.

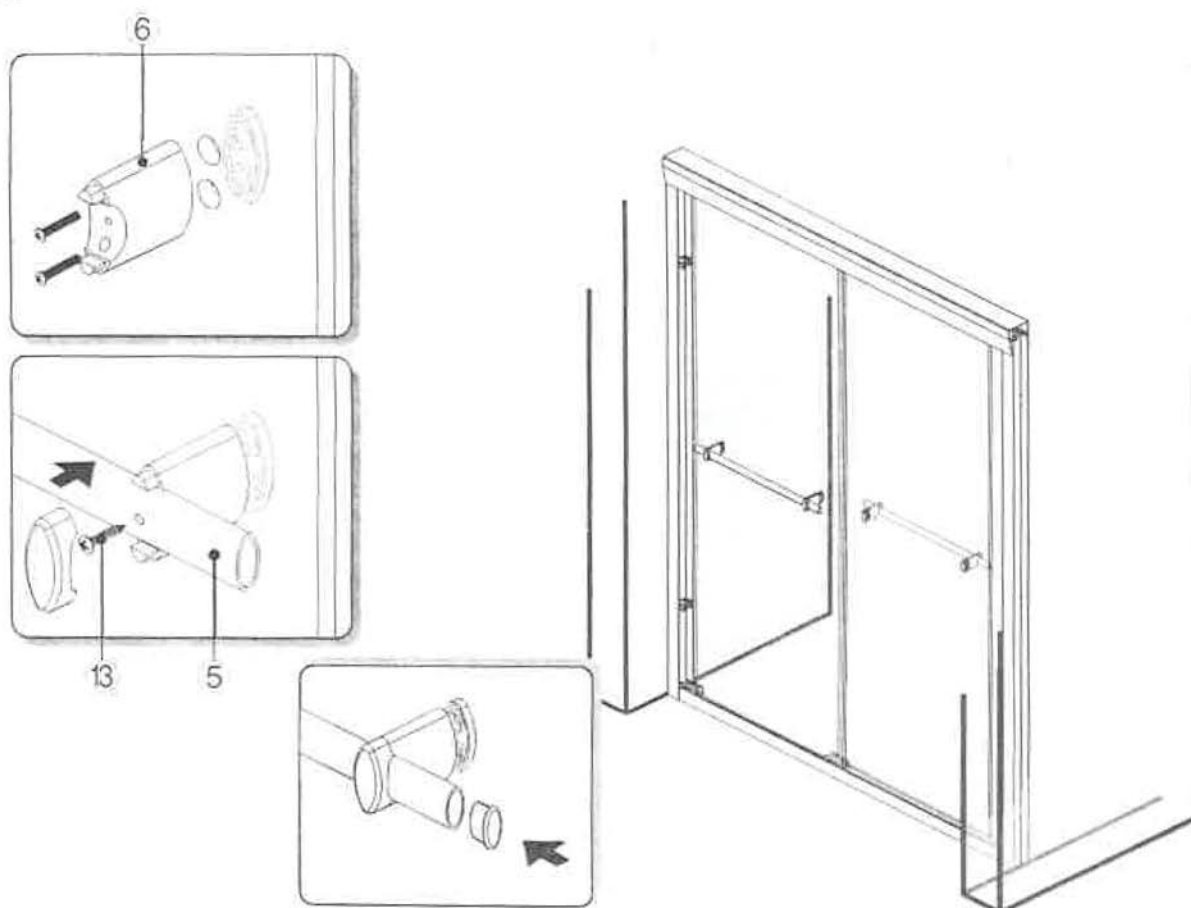

13.

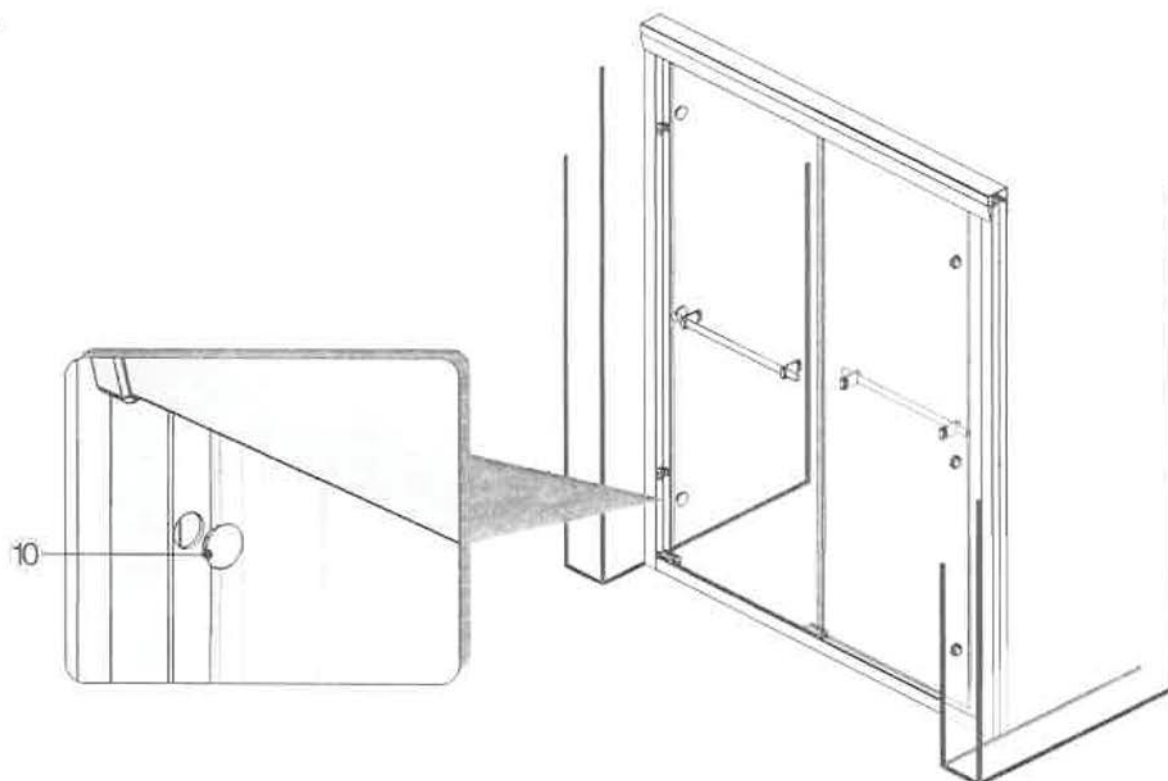

14.

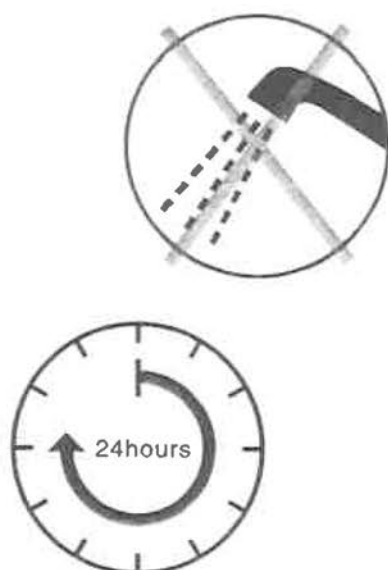

Warning:

Don't use the shower enclosure until after at least 24 hours, so that the silica gel can be totally dry.

